



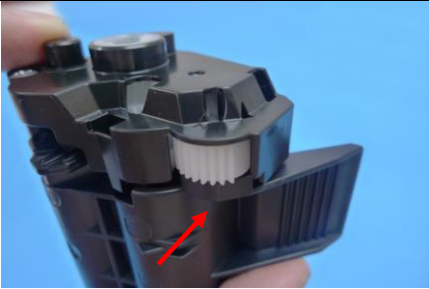


**How to Install The T.P.E. CC1907 BROTHER**

**HL-1110/1112/1112A/DCP-1510/1512/1512A/MFC-1810/TN1030/1050 STANDARD RESET LEVER and CC1908 BROTHER HL-1110/1112/1112A/DCP-1510/1512/1512A/MFC-1810/TN1030/1050 LEFT END CAP**

<p><b>CC1907 BROTHER HL-1110/1112/1112A/DCP-1510/1512/1512A/MFC-1810/TN 1030/1050 STANDARD RESET LEVER</b></p>	<p><b>CC1908 BROTHER HL-1110/1112/1112A/DCP-1510/1512/1512A/MFC-1810/TN 1030/1050 LEFT END CAP</b></p>
	

**Procedures**

	<p><b><u>Step 1</u></b> Using the starter cartridge as shown. Unscrew the End Cap from the HL-1110/ 1112/ 1112A/ DCP-1510/ 1512/ 1512A/ MFC- 810 starter toner cartridge and discard.</p> <p>Keep the small screws for reuse but the end cap needs to be replaced with the Triton End Cap.</p>
	<p><b><u>Step 2</u></b> Remove and save the gear from the HL-1110/ 1112/1112A / DCP-1510/ 1512/ 1512A/ MFC-1810 starter toner cartridge as shown by the arrow in the photo on the left.</p> <p>Keep the gear for reuse.</p>
	<p><b><u>Step 3</u></b> Put the T.P.E. CC1907 STANDARD RESET LEVER on to the shaft as shown in the photo. Add some Lithium Grease to the gears, reset lever, shafts of the gears and shaft of reset lever.</p> <p><b>It is important to make sure the tail of the Reset Lever resets onto the platform at the toner cartridge side as shown by the arrow in the photo on the left. If the tail of the Reset Lever is not in the correct position, inserting the cartridge will not reset the printer.</b></p>
	<p><b><u>Step 4</u></b> Install the T.P.E. CC1908 LEFT END CAP with two screws, make sure the position of the Reset Lever does not move. If the lever does moved, steps 2, 3 and 4 must be repeated. If the reset lever is not in the correct position, inserting the cartridge will not reset the printer.</p>