
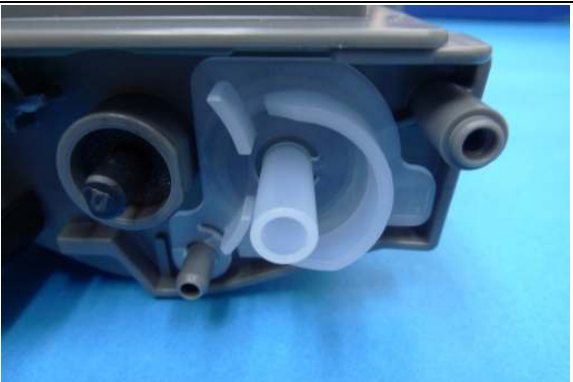



How to Install The T.P.E. CC1957 BROTHER

HL-L2360DN/L2360DW/L2365DW/L2380DW/L2340DW/L2300D/L2320D/DCP-L2500D/L2520DW/L2520D/L2540DN/L2540DW/L2560DW/MFC-L2700DW/L2700D/L2703DW/L2720DW/L2740DW/TN2320/660/2380/2345/2350/28J HIGH YIELD RESET LEVER, RETAINING PLATE WITH FILLER CAP AND SPRING

<p><u>BROTHER HL-L2360DN/L2360DW/L2365DW/L2380DW/L2340DW/L2300D/L2320D/DCP-L2500D/L2520DW/L2520D/L2540DN/L2540DW/L2560DW/MFC-L2700DW/L2700D/L2703DW/L2720DW/L2740DW Starter Cartridge</u></p>	<p><u>CC1957 BROTHER HL-L2360DN/L2360DW/L2365DW/L2380DW/L2340DW/L2300D/L2320D/DCP-L2500D/L2520DW/L2520D/L2540DN/L2540DW/L2560DW/MFC-L2700DW/L2700D/L2703DW/L2720DW/L2740DW/TN2320/660/2380/2345/2350/28J HIGH YIELD RESET LEVER, RETAINING PLATE WITH FILLER CAP AND SPRING</u></p>
	

Procedures to convert a Starter or Standard Yield Cartridge into a High Yield Cartridge


	<p><u>Step 1</u> Unscrew the End Cap from the Starter (Standard Yield) Toner Cartridge. Keep the end cap and small screws for reuse.</p>
	<p><u>Step 2</u> Install the Retaining Plate with Filler Cap onto the Cartridge. Make sure it is fitted properly to seal the fill hole and prevent leakage.</p>

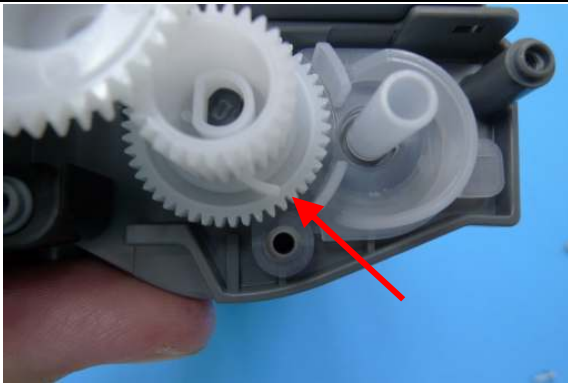

Step 3


Put the OEM gears back to the cartridge as shown in the photo. Add some Lithium Grease to the gears, reset lever, shafts of the gears and shaft of reset lever.

****It is important to make sure the Rib of the OEM gear must point to the direction as shown by the arrow in the photo on the left. If the rib of the gear is not in the correct position, inserting the cartridge will not reset the printer and the printer display will show error.**

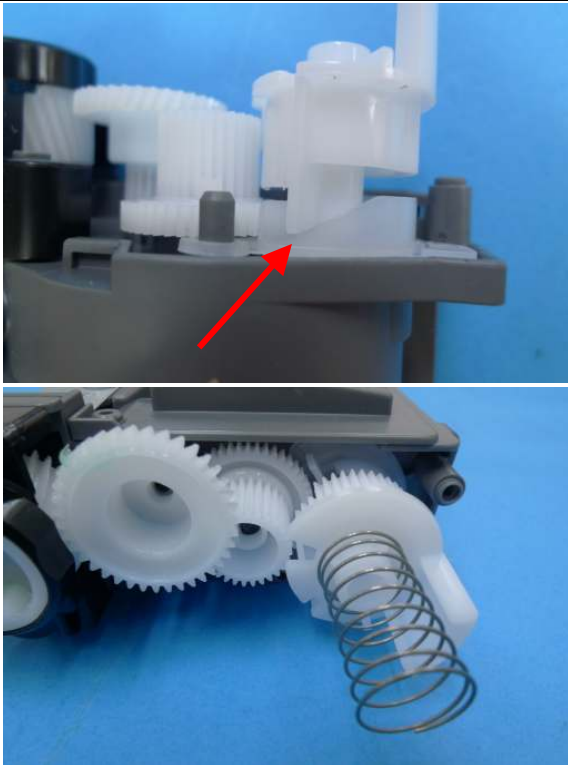

Step 4

Install the T.P.E. High Yield Reset Lever. Make sure the bottom protrusion Reset Lever is located to the slot of the Retaining Plate with Filler Cap. Then place the Spring onto the High Yield Reset Lever.

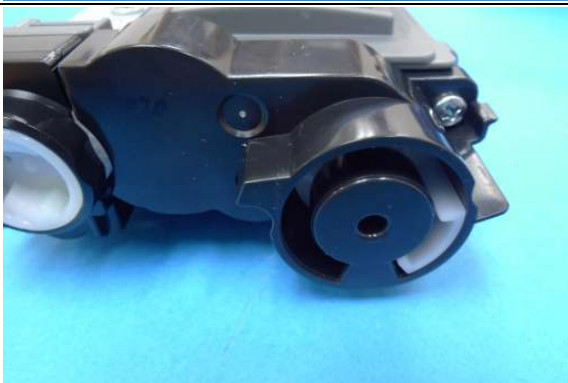

Step 5

Install the OEM End Cap and fit the two screws, making sure the position of the Reset Lever does not move. If the lever does moved, steps 3 and 5 must be repeated. If the reset lever is not in the correct position, inserting the cartridge will not reset the printer.