
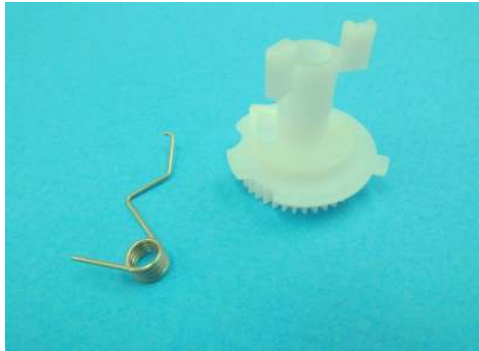






**How to Install The T.P.E. CC1576 BROTHER HL-3040/TN210/TN230/TN240 RESET LEVER AND SPRING**

Brother TN240BK Toner Cartridge	CC1576 BROTHER HL-3040/TN210/TN230/TN240 RESET LEVER AND SPRING
	

**Procedures**

	<p><b><u>Step 1</u></b></p> <p>Unscrew the End Cap from the HL-3040 toner cartridge.</p> <p>Keep the end cap and small screws for reuse.</p>
	<p><b><u>Step 2</u></b></p> <p>Installing the T.P.E. HIGH YIELD RESET LEVER on to the shaft. The rib on the Reset Lever must be positioned in line with the screw boss as shown in the photo.</p>
	<p><b><u>Step 3</u></b></p> <p>Installing the T.P.E. Reset Lever Spring. Make sure the straight tail of the Spring hooks onto the screw boss and the angled tail fits into a notch on the surface of the Reset Lever.</p>
	<p><b><u>Step 4</u></b></p> <p>Install the OEM End Cap with two screws but make sure the position of the Reset Lever does not move. If the lever has moved, steps 2, 3 and 4 must be repeated. If the reset lever is not in the correct position, inserting the cartridge will not reset the printer.</p>