


**INSTRUCTION FOR CONVERSION OF  
HP Q7516A CARTRIDGE (HP LASERJET 5200/5200L) TO FIT IN HP  
LASERJET PRO 700 M712 PRINTER**

**Machining of HP Q7516A (HP LASERJET 5200/5200L): Remove the raised ribs on the Waste Toner**

**Hopper**

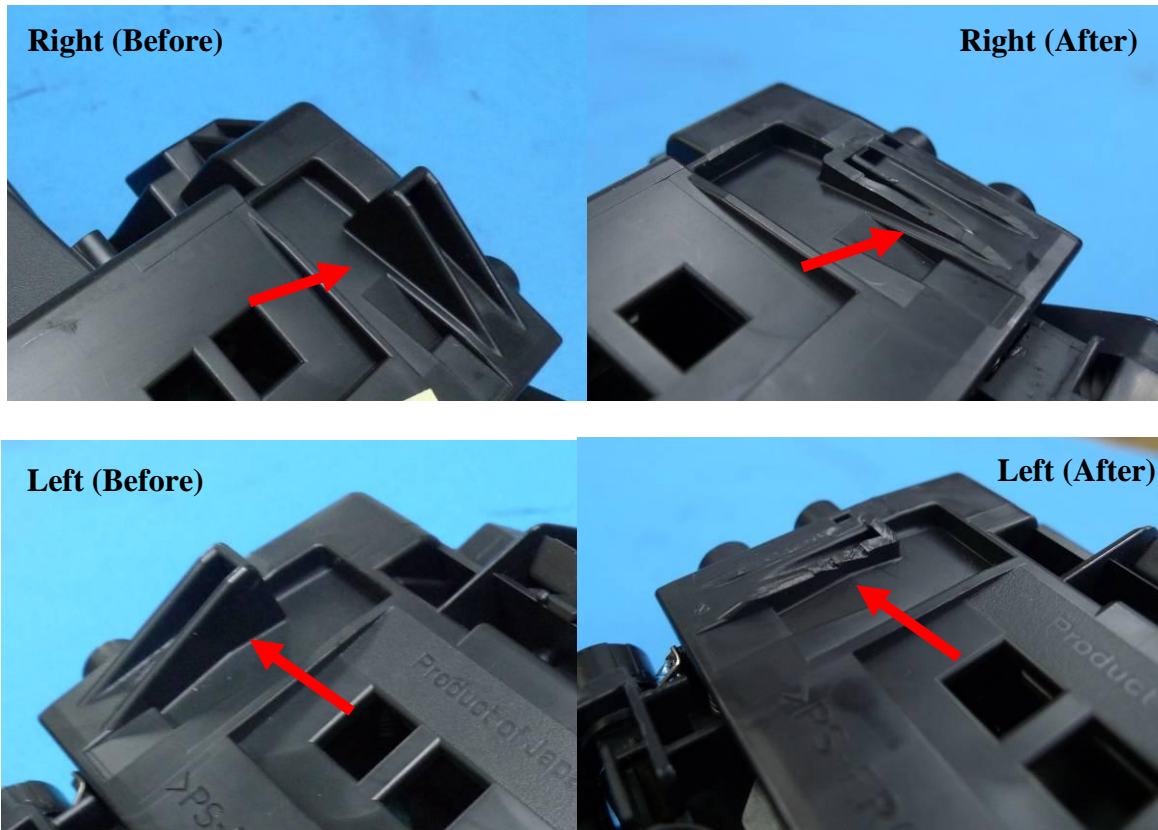

**Machining off HP Q7516A (HP LASERJET 5200/5200L): Reduce the height of the drum bearing plate**

**locating rib on the Waste Toner Hopper**



**Replace the existing HP Q7516A (HP LASERJET 5200/5200L) Drum Bearing Plate with the Drum Bearing Plate from Triton CC1847 HP LASERJET PRO 700 M712 CONVERSION KIT FOR HP5200**



- **HP Q7516A (HP LASERJET 5200/5200L) OEM Cartridge.**
  1. Remove the raised ribs on the **HP Q7516A (HP LASERJET 5200/5200L)** Waste Toner Hopper by Machining.
  2. Reduce the height of the drum bearing plate locating rib of the **HP Q7516A (HP LASERJET 5200/5200L)** Waste Toner Hopper to 1.7mm high.
  3. Replace the existing **HP Q7516A (HP LASERJET 5200/5200L)** Drum Bearing Plate with the Drum Bearing Plate from Triton CC1847 HP LASERJET PRO 700 M712 CONVERSION KIT FOR HP5200.
  4. Add the Trigger Arm on the Waste Toner Hopper.
- There is a Trigger Arm on the waste Toner Hopper of the **HP CF214A (HP LASERJET PRO 700 M712)**. **HP Q7516A (HP LASERJET 5200/5200L)** need to stick the Trigger Arm from Triton CC1847 HP LASERJET PRO 700 M712 CONVERSION KIT FOR HP5200.

