



CC1056 Universal Waste Section Instruction

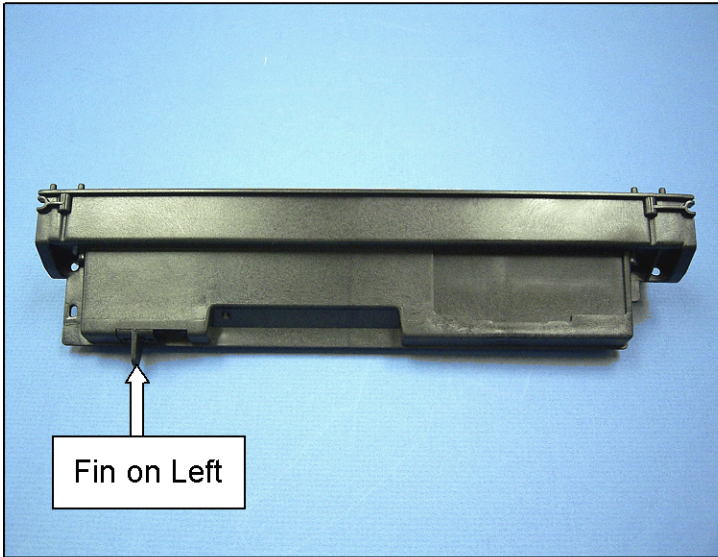

Please put the fin on the left as shown in the photo for the following models:


- Samsung ML1440/1450/1451/6040/6060
- IBM Infoprint 12
- Xerox Docuprint P1210
- Xerox Phaser 3310
- NEC Superscript 1400

Fuse box is not needed

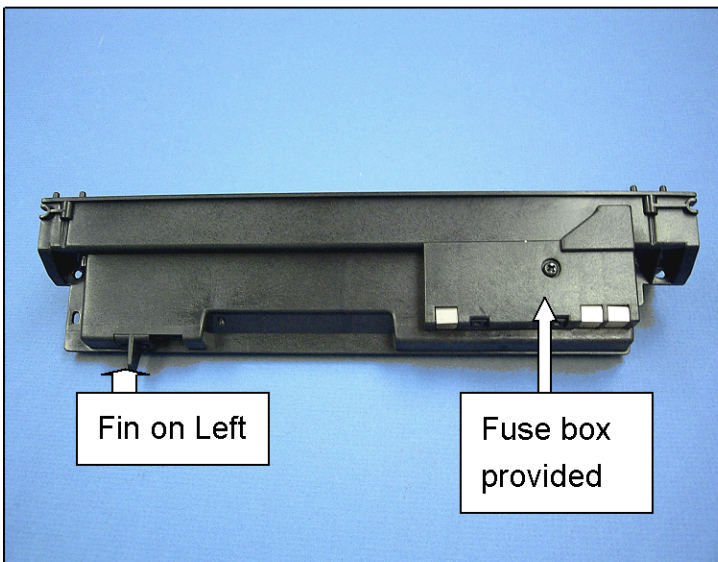

For the following model, please put the fin on the left and assemble the fuse box provided as shown in the photo

- Xerox Phaser 3400

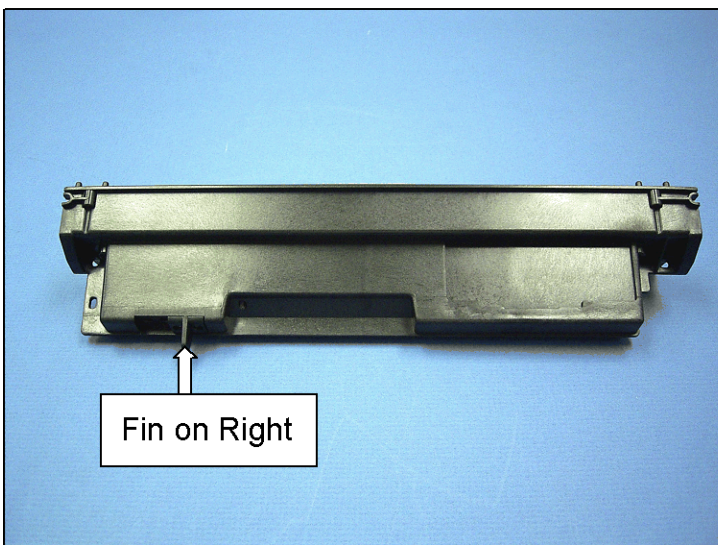

For the following model, please put the fin on the right as shown on the photo. Fuse box is not needed.

- Samsung ML1650/1651/1652/1653