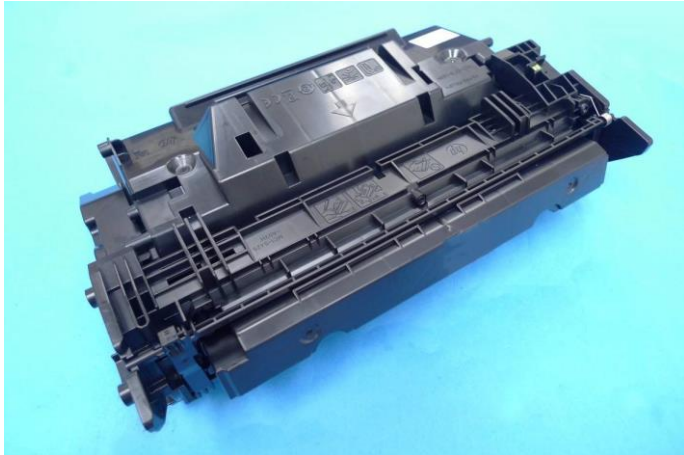


INSTRUCTIONS TO CONVERT A HP LASERJET ENTERPRISE M506/MFP M527 'A' VERSION OEM CARTRIDGE TO FIT AND USE IN A HP LASERJET PRO M402/ MFP M426 OEM PRINTER AS A HIGH CAPACITY CF226X CARTRIDGE

OEM HP M506/MFP 527 CARTRIDGE (CF287A)

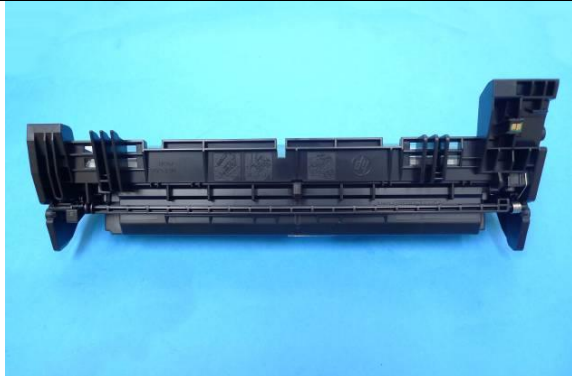


T.P.E CC2013 HP LASERJET PRO M402/MFP M426 CONVERSION KIT FOR HP LASERJET ENTERPRISE M506/ MFP M527 'A' VERSION CARTRIDGE

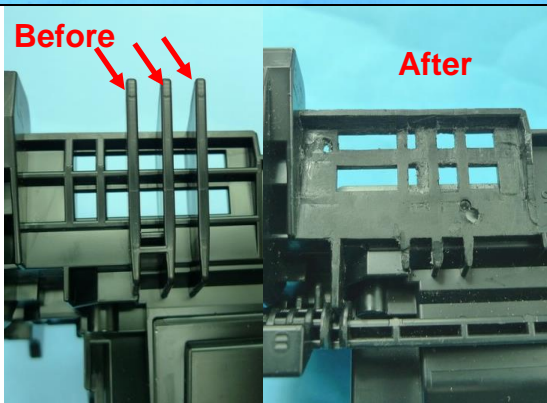


These instructions provide the necessary information to convert an OEM HP LaserJet Enterprise M506/MFP M527 'A' Version (CF287A) cartridge to a HP LaserJet Pro M402/MFP M426 'X' Version (CF226X) cartridge, by cutting the cartridge and using the T.P.E. CC2013 HP LASERJET PRO M402/MFP M426 CONVERSION KIT FOR HP LASERJET ENTERPRISE M506/ MFP M527 'A' VERSION CARTRIDGE.

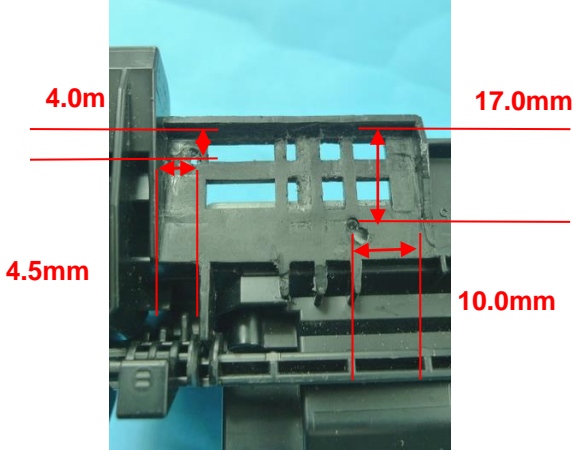
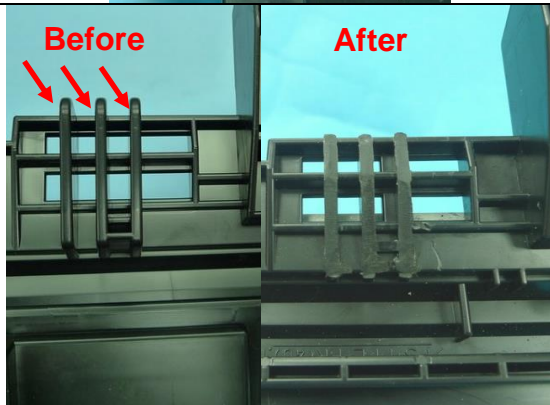
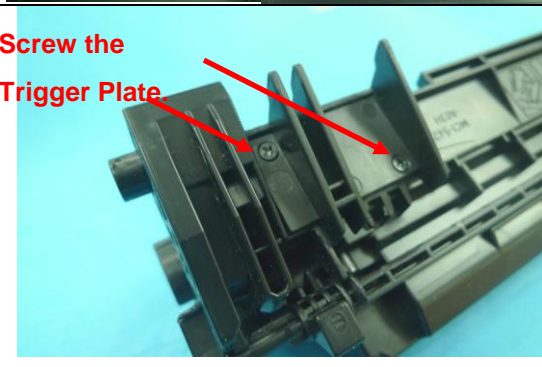
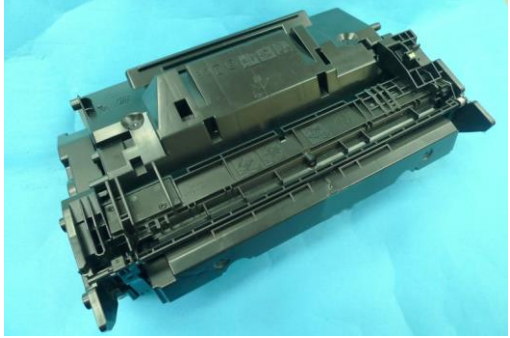
Procedures



Step 1
Disassemble the HP M506/MFP M527 Cartridge as standard procedure for remanufacturing.



Step 2
Machine off ribs on the right of the Waste Toner Hopper.

 <p>4.0m 17.0mm 4.5mm 10.0mm</p>	<p>Step 3</p> <p>Drill two diameter 2.4mm holes on the machined off platform as shown in the photo.</p>
 <p>Before After</p>	<p>Step 4</p> <p>Machine off ribs on the left of the Waste Toner Hopper.</p>
 <p>Screw the Trigger Plate</p>	<p>Step 5</p> <p>Remove the Release Liner on the back of Trigger Plate. Place the T.P.E CC2013 onto the platform of the HP M506/MFP M527 OEM Waste Toner Hopper. Then use the screws which come with the T.P.E CC2013 to fix the Trigger Plate to the hopper as shown in the photo.</p>
	<p>Step 6</p> <p>Reassemble the OEM HP M506/MFP M527 Toner Hopper and Waste Toner Hopper.</p> <p>The conversion for changing an OEM HP LaserJet Enterprise M506/MFP M527 'A' Version (CF287A) cartridge to a CF22gX cartridge that will fit the HP LaserJet Pro M402/MFP M426 printer is now complete.</p>