


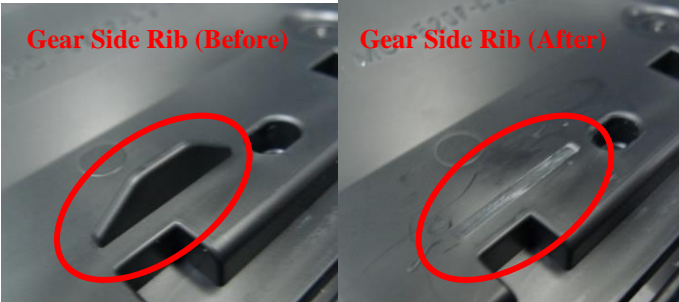
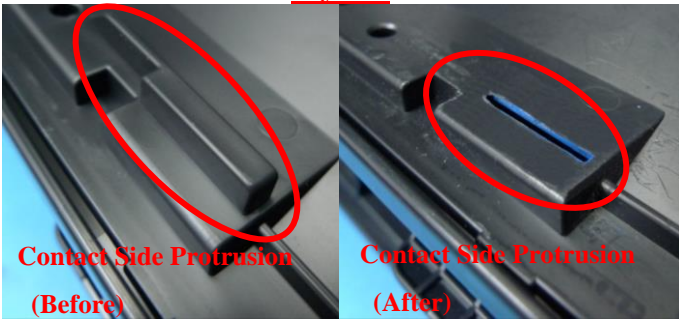
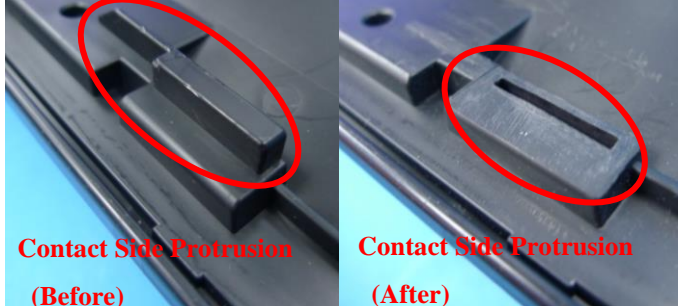



INSTRUCTIONS TO CONVERT AN HP CP5225/5525 CARTRIDGE TO FIT AND USE IN AN HP LASERJET ENTERPRISE 700 COLOR MFP M775 PRINTER USING CC1885 HP LASERJET ENTERPRISE 700 COLOR MFP M775/CANON 335 CONVERSION "T" SHAPED PLASTIC PLUG FOR HP CP5225/5525/CANON 322/322II

<p align="center"><u>OEM HP CP5225 CARTRIDGE (CE740A-CE743A)</u></p> 	<p align="center"><u>OEM HP CP5525 CARTRIDGE (CE270A-CE273A)</u></p> 
<p align="center"><u>CC1885 HP LASERJET ENTERPRISE 700 COLOR MFP M775/CANON 335 CONVERSION "T" SHAPED PLASTIC PLUG FOR HP CP5225/5525/CANON 322/322II</u></p> 	

Procedures

 <p>Gear Side Rib (Before) Gear Side Rib (After)</p>	<p align="center"><u>Step 1</u></p> <p>Machine off the rib on the gear side of the OEM HP CP5225/5525 Waste Toner Hopper, as shown in photos on the left.</p>
<p align="center"><u>Style A</u></p>  <p>Contact Side Protrusion (Before) Contact Side Protrusion (After)</p>	<p align="center"><u>Step 2</u></p> <p>Machine off the protrusion on the contact side of the OEM HP CP5225/5525 Waste Toner Hopper, as shown in photos on the left.</p>
<p align="center"><u>Style B</u></p>  <p>Contact Side Protrusion (Before) Contact Side Protrusion (After)</p>	<p>**There are two styles of the waste toner hopper with little bit difference of the protrusion's platform released by OEM. Both can be machined and fitted with T.P.E. CC1885 for conversion, as shown in photos on the left.</p>

Style A

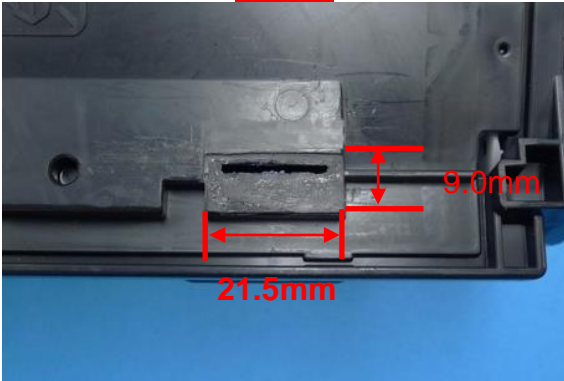

Style B



Step 3

After machined off the protrusion on the contact side of the Waste Toner Hopper, then mill a 0.50mm deep recess area on the OEM CP5225/5525 Waste Toner Hopper, to the dimensions as shown in photo on the left.

Style A



Style B



Step 4

Stick the CC1885 HP LASERJET ENTERPRISE 700 COLOR MFP M775 CONVERSION "T" SHAPED PLASTIC PLUG FOR HP CP5225/5525 to the waste toner hopper to seal the hole, as shown in photo on the left.

The conversion is now complete.