

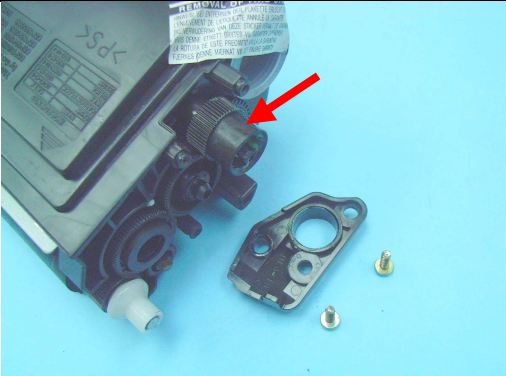

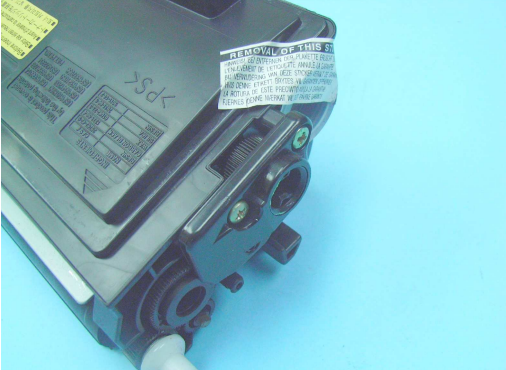
## Instruction of CC1091 BROTHER TN6600 GEAR



**CC1091 BROTHER TN6600 GEAR**

These instruction provide the information required to assembly the T.P.E. CC1091 BROTHER TN6600 GEAR. This gear becomes damaged after a while causing slipping of the cartridge drive.

### Procedures

	<p style="text-align: right;">Step 1</p> <p>Unsrew the plates holding and end plate and take off the OEM Brother TN6600 left end plate and remove the damaged gear.</p>
	<p style="text-align: right;">Step 2</p> <p>Put the CC1091 BROTHER TN6600 GEAR onto the shaft; adding some grease before finally pressing the gear onto the shaft.</p>
	<p style="text-align: right;">Step 3</p> <p>Assemble the OEM TN6600 left end plate onto the cartridge; and screw back into position. Cartridge is now ready for use.</p>