
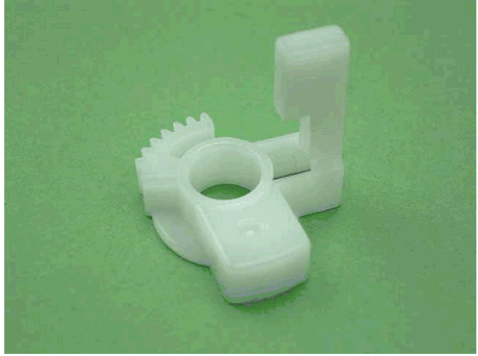
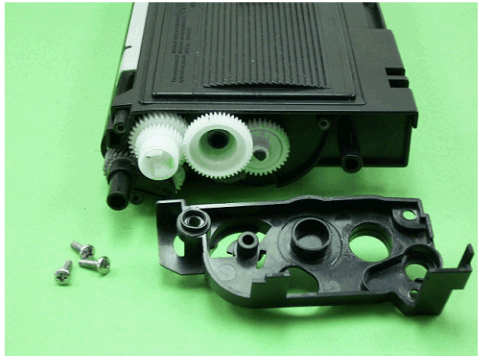

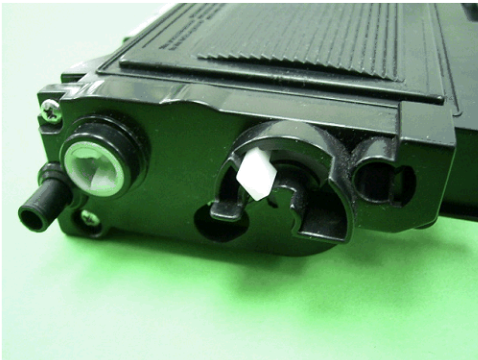


Installation of the Reset Lever for Brother TN350 / TN2000 Toner Cartridge

Brother TN350 / TN2000 Toner Cartridge (starter cartridge without Reset Lever)	CC1182 TN350/TN2000 Mechanical Reset Lever
 <p>Slot for Reset Lever</p>	

Installation Procedures

<p><u>Step 1</u></p> 	<p>Unscrew and take off the Drive Train End Cap.</p>
<p><u>Step 2</u></p> 	<ol style="list-style-type: none">1.) Install the CC1182 TN350/2000 Mechanical Reset Lever into the Drive Train End Cap.2.) Rotate the Reset Lever to the specified position for printer to detect the Reset Lever.
<p><u>Step 3</u></p> 	<ol style="list-style-type: none">1.) Screw the Drive Train End Cap on the Toner Cartridge.2.) Installation completed.