

Instructions for conversion of HP1320 Cartridges to HP P2015 Cartridges using T.P.E. CC1242 P2015 Conversion Kit

OEM HP1320 (Q5949X)



T.P.E. CC1242 P2015 Conversion Kit




T.P.E. CC1242 P2015 Conversion Kit includes the follow:

P2015 Large Waste Hopper, this includes PCR saddles/PCR saddle springs/PCR contact /PCR contact trigger/Hinge pins/OPC pin/Drum bearing plate and mounting screw. All sealing foams and recovery blade are pre-installed.

P2015 Left End Cap. This includes mounting screws/ metal contact and Hopper tension spring

P2015 Right End Cap. This includes mounting screws and Hopper tension spring

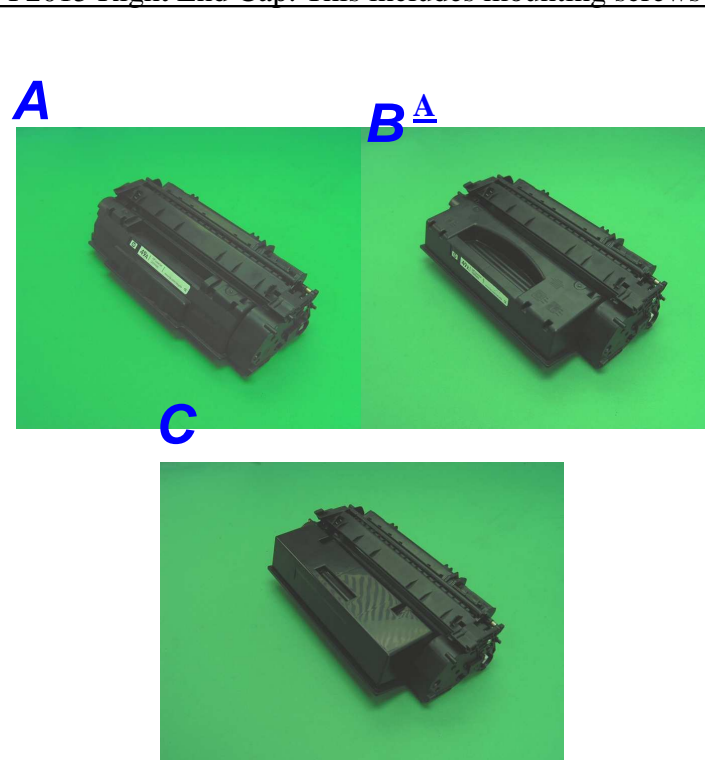

With the T.P.E. P 2015 conversion kit, you can make the following conversions.

A. Convert an OEM HP1320 Starter A Cartridge (49A) to a P2015 Starter A Cartridge (53A).

B. Convert an OEM HP1320 Standard X Cartridge (49X) to a P2015 Standard X Cartridge (53X).


C. Convert either the above OEM HP1320 Cartridges into a Jumbo Cartridge to suit the HP P2015 Printer.

The steps for each conversion are similar. We will illustrate the steps using a T.P.E.

CC1092 Jumbo Hopper.

Conversion Steps 1 (Waste Hopper Installation)


Step 1

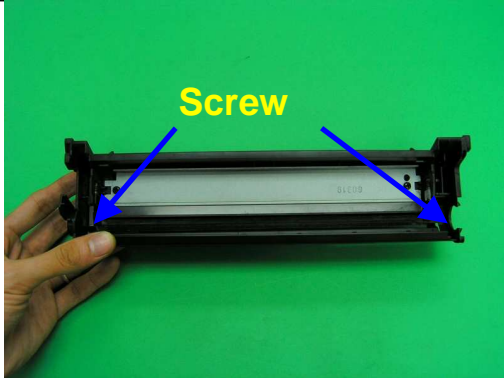

The first step is to assembly the P2015 Waste Hopper. If you choose to re-use OEM components, please carefully disassemble the OEM drum/PCR/Wiper Blade from the OEM HP 1320 cartridge and clean them thoroughly.

Install the wiper blade as shown and tighten the 2 screws. Remember to lubricate the wiper blade.

Check the conductivity across these 2 points.

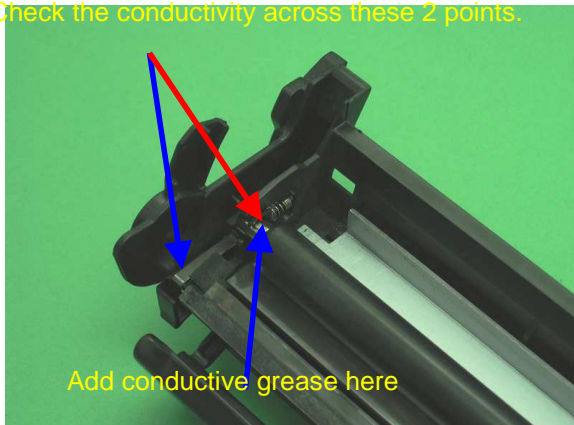


Step 2

Install the PCR as shown. If you are using an OEM PCR, please make sure it is carefully cleaned.

Remember to add conductive grease on the black PCR saddle.

Check the conductivity across the PCR and the PCR contact by using a multimeter.

1. Place the Drum into the Waste Hopper
2. Attach the Bearing Plate with screws.

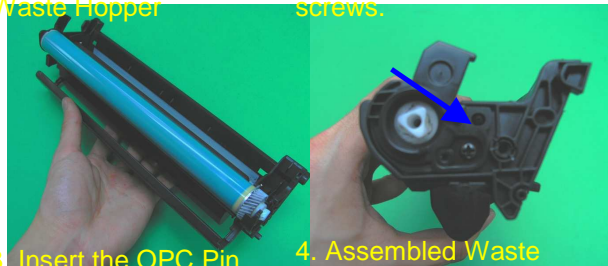

3. Insert the OPC Pin

4. Assembled Waste Section.




Step 3

Install the OPC Drum as shown.


Screw on the OPC Drum Bearing Plate and press in the OPC Drum Pin.

Installation Instruction 14

1. Insert the spring on the trigger arm. Add a drop of glue here



2. Place the trigger arm as shown on the photo.



3. Insert the Trigger arm locking pin to fix the trigger in position.

Step 4

Install the PCR contact Trigger onto the P2015 Waste Hopper as per the steps shown. This trigger is included in the P2015 Conversion kit.

Conversion Steps 2 (Hopper Side Installation)

Fill Hopper with toner and insert the filler cap.




Step 1

The photo shows a CC1092 T.P.E. 1320 Jumbo hopper with seal fitted. If you are using an OEM HP 1320 hopper for this conversion, make sure you disassemble the OEM Left/Right end caps, Mag Roller/Mag Roller bushing /Mag Roller Wipers/Doctor Blade and carefully clean all components thoroughly except the end caps which are discarded.

Install the doctor blade into the Hopper, and place the Mag Roller wiper on each end of the Doctor Blade. Tighten two screws that hold the doctor blade and wipers in place.

Installation Instruction 14



Step 2

Place the Left/Right Mag Roller Bushing on each end of the Mag Roller

Install the Left Stabilizer.



Step 3

Install the Left Stabilizer on the P2015 Left End Cap, then install the Left End Cap on left side of the hopper. The P2015 Left End Cap includes the Pull Tab feature like the OEM but does not include the orange clip. The orange clip is available separately or you can use the OEM orange clip Tighten all screws on the Left End Cap.



Step 4

Install the Mag Roller as shown in the Hoper as shown in the photo.


Then insert the Right Stabilizer, and all drive gears on the right side of the hopper.



Step 5


Install the P2015 Right End Cap on the right side of the Hopper. Tighten the 2 screws on the Right End Cap.

Installation Instruction 14

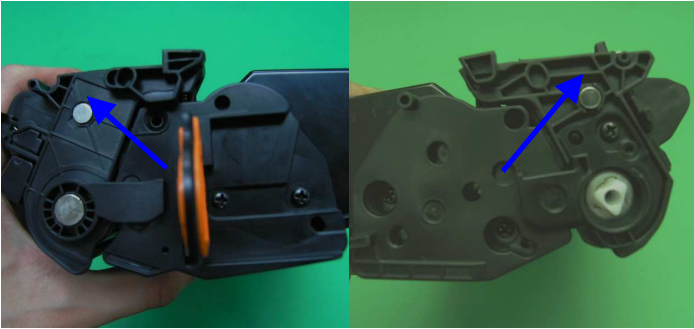

Step 6

Assemble the Hopper side and Waste Hopper together and insert the hinge pin on each side to hold them together.

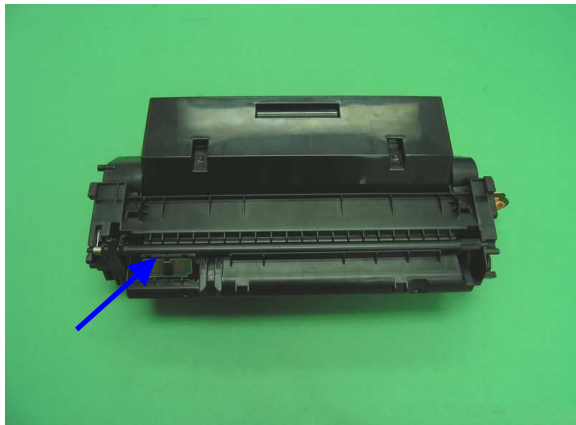

Step 7

Finally, install the Chip, and the conversion from an HP1320 cartridge to a cartridge that will fit the HP P2015 Printer is complete.