
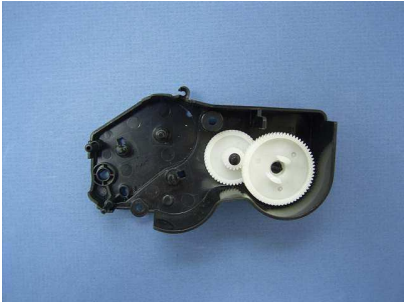






OEM HP2420 (Q6511A) Cartridge (or OEM HP P3005 (Q7551A) Cartridge) Conversion Using T.P.E. CC1153 HP P3005/2420/2430/2400 Enlarged Hopper (800+ grms Fill)

<p>OEM HP2420 (Q6511A) Right End Cap with the 3 Gears needed for the conversion</p>	<p>T.P.E. HP2420 Jumbo Hopper Right End Cap CC1161G comes with the 2 additional gears required</p>
	

Note:


- The Toner Hopper of the OEM HP2420 cartridge (Q6511A) and the OEM HP P3005 cartridge (Q7551A) is the same. Save the three Gears from the OEM HP2420 cartridge (Q6511A) or OEM HP P3005 cartridge (Q7551A). These are needed to be placed in the T.P.E. HP2420 Right END CAP CC1161G when making the HP2400 or HP P3005 Jumbo Cartridge.

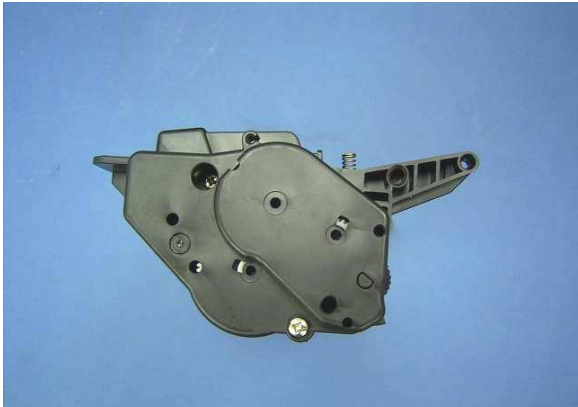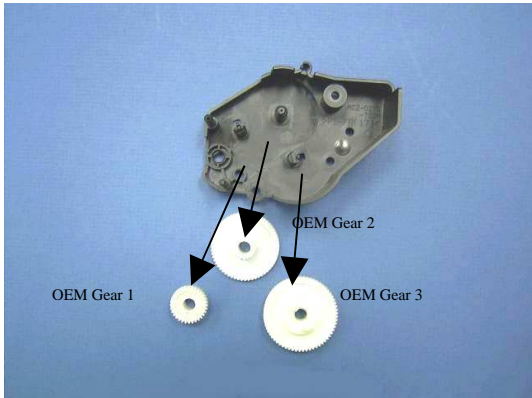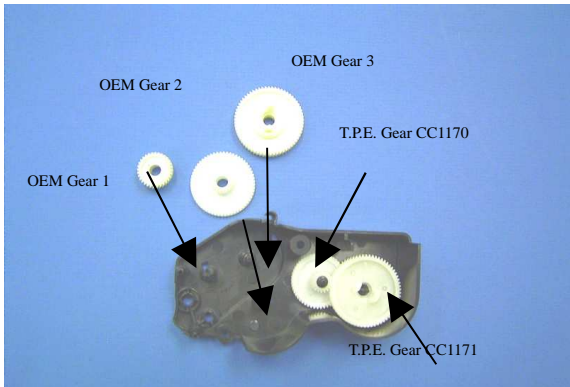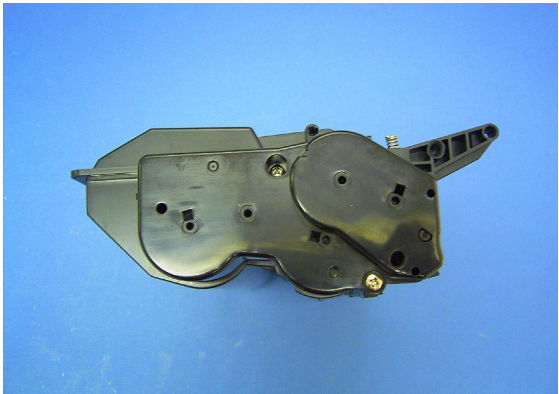Conversion Procedure


<p><u>Step 1</u></p> 	<p><u>Step 2</u></p> 
<p><u>Step 3</u></p> 	<p><u>Step 4</u></p> 

Installation Instruction 2

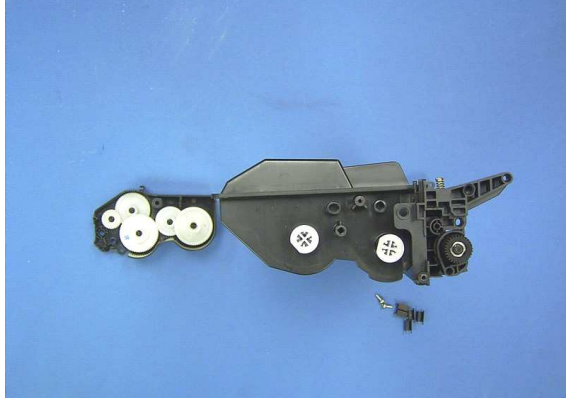
Step 5



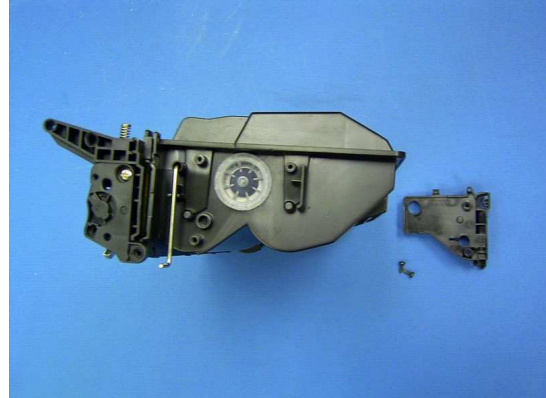Step 6



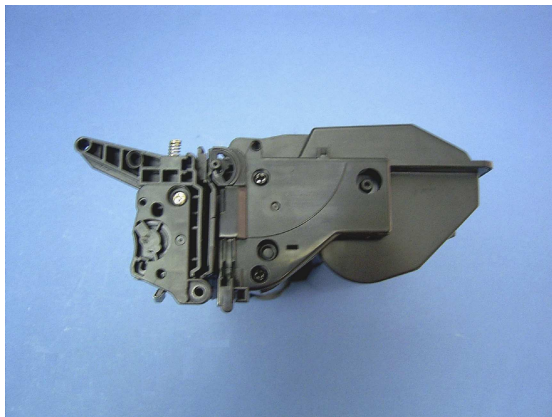Step 7



Procedure

- Step 1: Unscrew the OEM HP2420 (Q6511A) or OEM HP P3005 (Q7551A) Right End Cap.
- Step 2: Take out the three Gears from the OEM HP2420 (Q6511A) or the OEM HP P3005 (Q7551A) Right End Cap.
- Step 3: Prepare the T.P.E. HP2420 Jumbo Hopper right End Cap CC1161G for reassembly to the hopper. Add the three OEM gear as shown to the gears already in place in the T.P.E. Jumbo Hopper End Cap.
- Step 4: Assemble the T.P.E. Jumbo Hopper CC1153 with the T.P.E. Clips P1034 to the OEM Mag Roller Housing.
- Step 5: Assemble the T.P.E. Jumbo Hopper Right End Cap with 5 gears installed onto the assembled T.P.E. Jumbo Hopper CC1153 and OEM Mag Roller Housing.
- Step 6: Prepare T.P.E. Left End Cap CC1160 to fix to the T.P.E. Jumbo Hopper CC1153 with the 2 screws provided.
- Step 7: Assemble and screw the T.P.E. Left End Cap CC1160 onto the assembled T.P.E. Jumbo Hopper CC1153 and OEM Mag Roller Housing.