

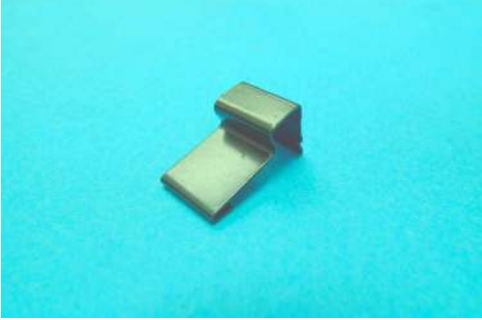



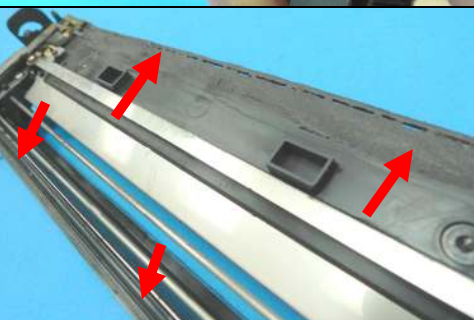


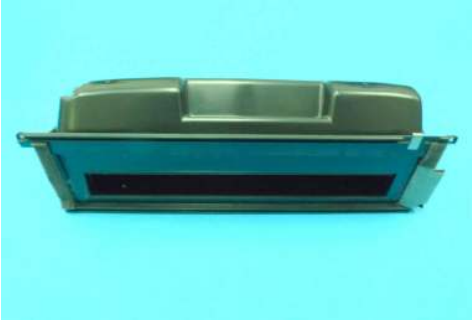




**Installation Instructions for CC1018 HP4100 ENLARGED HOPPER 750GRMS FILL**

<p><u>OEM HP 4100 Toner Hopper (C8061A/X)</u></p> 	<p><u>T.P.E. CC1018 HP4100 ENLARGED HOPPER 750GRMS FILL</u></p> 
<p><u>CC1020 HP4100 Enlarged Hopper Top Clips (short)</u></p> 	<p><u>CC1021 HP4100 Enlarged Hopper Bottom Clips</u></p> 

**Procedures**

	<p><b><u>Step 1</u></b></p> <p>a.) Unscrew the OEM HP 4100 Toner Hopper's Right End Cap.  b.) Take out the Mag Roller, Left and Right Mag Roller Bushes, Left and Right Mag Roller Wipers, Doctor Blade, Doctor Blade Shims, Mag Roller Gear, Left and Right Stabilizers, Left and Right Stabilizer bearing from the OEM HP 4100 Mag Roller Housing. Clean all these parts.</p>
	<p><b><u>Step 2</u></b></p> <p>Split the OEM Mag Roller Housing and the Hopper Section by a wedge splitter. Be careful not to damage the toner low contact between the split line on the Mag Roller Housing. New contacts are already fitted on the Triton Hopper so the contact on the OEM Hopper are not required to be reused.</p>
	<p><b><u>Step 3</u></b></p> <p>Remove the ribs on the Mag Roller Housing by cutting the top and the bottom as shown in the photograph on the left.</p>

## Installation Instruction 84

	<p style="text-align: center;"><b><u>Step 4</u></b></p> <p>Place the T.P.E. CC1369 HP4000/4100/2100/2300 RIGHT AND LEFT HOPPER FOAMS (1 SET, 2 PCS) that come with the CC1018 HP4100 ENLARGED HOPPER 750GRMS FILL (BLACK COLOR, UNSEALED) on to the Enlarged Toner Hopper.</p> <p><b>** If using the TPE CC1018SRS HP4100 ENLARGED HOPPER 750GRMS FILL (BLACK WITH SEAL) for assembly, these foams are not enclosed, as the Triton SRS Seal which already fitted on CC1018SRS has the same function as these foams for sealing.</b></p>
	<p style="text-align: center;"><b><u>Step 5</u></b></p> <p>After the seal has been fitted to the Enlarged Toner Hopper, then place the Mag Roller Housing in the correct position on the front of the Enlarged Toner Hopper. It is essential to make sure the toner low contacts on the Hopper and the Mag Roller Housing are in contact with each other without any interference from the seal.</p>
	<p style="text-align: center;"><b><u>Step 6</u></b></p> <p>Push 4 of the CC1021 HP4100 ENLARGED HOPPER BOTTOM CLIPS on to the bottom of the Mag Roller Housing and Enlarged Toner Hopper. Make sure the clips are equally spaced in the positions as shown in the photograph on the left. The bottom of the Hopper and the Mag Roller Housing must be straight.</p>
	<p style="text-align: center;"><b><u>Step 7</u></b></p> <p>Assembly 4 of the CC1020 HP4100 ENLARGED HOPPER TOP CLIPS (SHORT) equally spaced on to the top of the Mag Roller Housing and Toner Hopper as shown in the photograph on the left. Push the clips home making sure the top edge on the Mag Roller Housing is held by the clips in a straight line.</p>
	<p style="text-align: center;"><b><u>Step 8</u></b></p> <p>Reassemble the Mag Roller, Left and Right Mag Roller Bushes, Left and Right Mag Roller Wipers, Doctor Blade, Doctor Blade Shims, Mag Roller Gear, Left and Right Stabilizers, Left and Right Stabilizer bearing back onto the Mag Roller Housing. Then complete the assemble by screwing the HP 4100 Right End Cap with all gears installed onto the assembled Enlarged Toner Hopper and Mag Roller Housing.</p> <p>The installation is now complete.</p>