


Installation of CC1444 HP CP1215/1515/1518 COVER



These instructions will provide the information required to install the CC1444 HP CP1215/1515/1518 COVER into the HP CP1215/1515/1518 cartridge.


Procedures

Installation Instruction 33

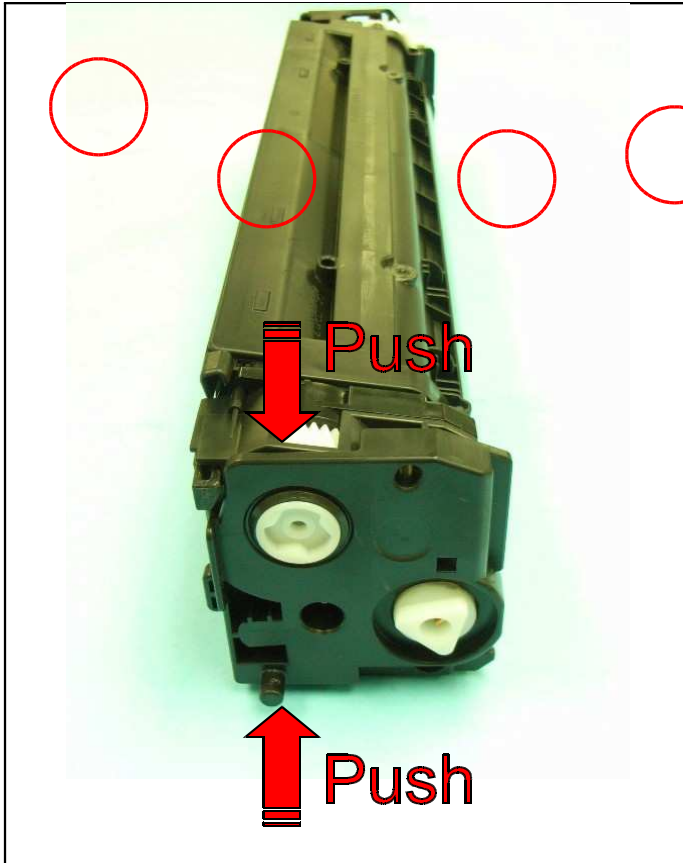

Step 1

Squeeze the Drum Section and Toner Hopper to raise the developer roller from the OPC drum.

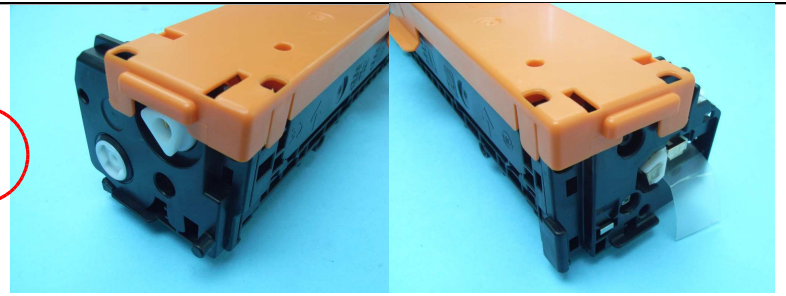

Step 2

Then place the Cover on the cartridge, The Cover is locked in place by two clips at the left and two clips at the right (Red Circles). Make sure they are all locked in place in the corresponding position on the cartridge.